## BEDIENUNG UND INSTALLATION OPERATING AND INSTALLATION


KOMFORT-FUNK-FERNBEDIENUNG FÜR DURCHLAUFERHITZER COMFORT RADIO REMOTE CONTROL FOR INSTANTANEOUS WATER HEATER

- » FFB 1 SL ELECTRONIC COMFORT
- » FFB 2 SL ELECTRONIC COMFORT



STIEBEL ELTRON

D	Deutsch Seite 3-9					
ln	hal	tsverzeichnis				
1.	Bed	Beschreibung	3			
	1.1	Beschreibung	3			
	1.2	Dealellang	_ 3			
	1.3	Wandhaiterung	_ 4			
	1.4	Pflege	_ 4			
	1.5	Pflege	_ 4			
2.	Installation 2.1 Legende 2.2 Technische Daten 2.3 Vorschriften und Bestimmungen		5			
	2.1	Legende	5			
	2.2	Technische Daten	5			
	2.3	Vorschriften und Bestimmungen	5			
	2.4	Montage Abmelden von Funkbedienteilen	5			
	2.5	Abmelden von Funkbedienteilen	5			
	2.6	Ubergabe	5			
3.	Mer	nüführung Auf einen Blick Temperatur einstellen	6			
	3.1	Auf einen Blick	6			
	3.2	Temperatur einstellen	6			
	3.3	Warnanzeigen	6			
	3.4	ECO - Funktion	— 6			
	3.5	ECO - Funktion Wassermengenautomatik	_ 7			
	3.6	Wellness-Duschen	7			
	3.7	Kindersicherung	_ 7			
4.	Kon	nfortfunktionen-Einstellung	_ 8			
	Störungsbeseitigung 5					

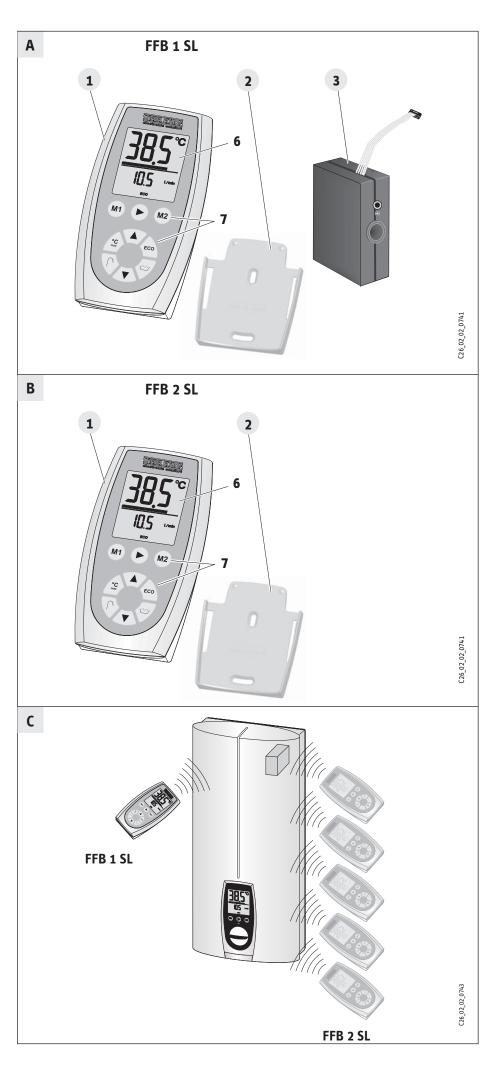



#### 1. Bedienung für den Benutzer und den Fachhandwerker

#### 1.1 Beschreibung

FFB 1 SL und FFB 2 SL ermöglichen eine Fernbedienung der Durchlauferhitzer DHE .. SL (i) electronic comfort über eine Funkstrecke. Das Gerät lässt sich sowohl über die Funkfernbedienung als auch über das Bedienteil am Gerät bedienen, die Daten werden in beide Richtungen übertragen (siehe auch 1.2 Bedienung).

#### Lieferumfang FFB 1 SL A

- Funkbedienteil 1
- Wandhalterung mit Klebepad
- Sende- und Empfangsmodul 3


#### Lieferumfang FFB 2 SL B

- Funkbedienteil 1
- Wandhalterung mit Klebepad 2

#### Die FFB 2 SL arbeitet nur in Verbindung mit dem Sende- und Empfangsmodul der FFB 1 SL.

Das Funkbedienteil ist wasserdicht (IPX7) und kann somit auch beim Duschen oder Baden benutzt werden. Die Reichweite des Funkbedienteiles beträgt ca. 25 m im Gebäude.

Zusätzlich zum Funkbedienteil der FFB 1 SL können bis zu 5 weitere Funkbedienteile FFB 2 SL mit dem Sende- und Empfangsmodul im Durchlauferhitzer kommunizieren.

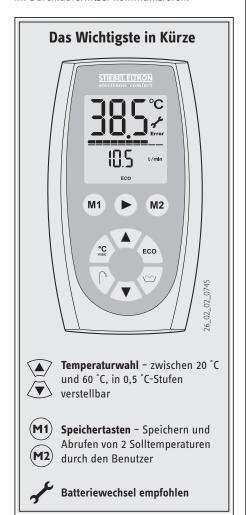

#### 1.2 Bedienung

Das Funkbedienteil befindet sich im Normalfall im stromsparenden Modus (Display ausgeschaltet). Durch kurzes Drücken einer beliebigen Taste (7) wird das Bedienteil aktiviert, die Hintergrundbeleuchtung erscheint sofort, die Anzeige nach ca. 3 Sekunden. Die Beleuchtung wird bei jeder Tastenbetätigung für 8 Sekunden aktiviert. Erfolgt innerhalb von 30 Sekunden keine Betätigung einer Taste, schaltet das Bedienteil automatisch wieder in den stromsparenden Modus.

#### 1.2.1 Dynamischer Verbrühschutz

Um die Verbrühgefahr zu reduzieren, ist die Funkfernbedienung mit einem dynamischen Verbrühschutz ausgestattet.

#### Funktion

Das zuerst betätigte Bedienteil (die Funkfernbedienung oder das Bedienteil am Gerät) erhält Priorität für den nächsten Zapfvorgang, das heißt, von anderen Bedienteilen kann die gewählte Temperatur verringert oder maximal auf 43 °C erhöht werden.

#### Aktivierung

Zur Aktivierung des dynamischen Verbrühschutzes muss entweder am DHE..SL (i) für die ausgewählte Zapfstelle eine Temperaturwahl durch Betätigung eines Bedienelementes erfolgen oder an einem Funkbedienteil eine Temperaturwahl durch Drücken einer beliebigen Taste, die das Funkbedienteil "aufweckt", erfolgen. Im Display des Funkbedienteils erscheint dann die gewählte Solltemperatur, die ggf. noch angepasst werden kann. Beginnt während der nächsten 2 Minuten eine Zapfung, bleibt der dynamische Verbrühschutz während der Zapfung und bis 2 Minuten nach Zapfende erhalten.

#### 1.2.2 Wichtige Hinweise




- Bei Auslauftemperaturen größer 43 °C besteht Verbrühungsgefahr!
- Sollten Kinder oder Personen mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten das Gerät bedienen, so ist sicherzustellen, dass dies nur unter Aufsicht oder nach entsprechender Einweisung durch eine für ihre Sicherheit zuständige Person geschieht.

Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen - Verbrühungsgefahr!

Ist das nicht zu vermeiden, empfehlen wir eine dauerhafte Temperaturbegrenzung über die Funktion "Kindersicherung" (siehe Komfortfunktionen-Einstellung).

Weitergehender "Verbrühschutz" kann durch den Fachhandwerker (im Kundendienstmodus am DHE..SL (i)-Bedienteil) aktiviert werden.

Alle Informationen in dieser Bedienung und Installationsanleitung müssen beachtet werden. Sie geben wichtige Hinweise für die Sicherheit, und Bedienung der Funkfernbedienung.

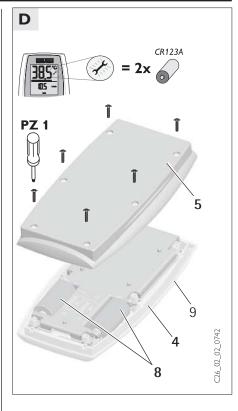

#### 1.2.3 Batteriewechsel 🔑 D

Das Funkbedienteil wird von 2 Lithiumzellen (Bauform CR123A) versorgt. Erscheint das Symbol im Display, wird ein Batteriewechsel empfohlen. Ansonsten Batterie bei schwacher oder nicht mehr vorhandener Anzeige wechseln.

Verbrauchte Batterien unbedingt entfernen. Für Schäden durch ausgelaufene Batterien kann nicht gehaftet

Zum Wechseln der Batterien das Gehäuseunterteil (5) aufzuschrauben und beide Batterien (8) tauschen. Auf die korrekte Polung der Batterien achten. Immer gleichartige Batterietypen verwenden und paarweise tauschen.



Batterien dürfen nicht im Hausmüll entsorgt werden.

Verbrauchte Batterien müssen beim Handel oder einer Sammelstelle für Sonderstoffe abgegeben werden!

Bei der Installation des Gehäuseunterteiles ist darauf zu achten, dass die Dichtung (9) korrekt im Gehäuseoberteil (4) liegt, damit die Dichtigkeit des Bedienteils gewährleistet bleibt.

#### 1.2.4 Hinweise zur Funkstrecke

Spezielle Gegebenheiten in Gebäuden können zu einer
Schwächung der Ausbreitung der Funkwellen führen. In solchen Fällen kann die Reichweite der Fernbedienung reduziert sein. Wenn die FFB..SL keine Verbindung zum Gerät aufbauen kann, erscheint in der Anzeige: "CON"

Da der verwendete Frequenzbereich von 868 MHz auch für andere Anwendungen (Funkthermostate, Wetterstationen mit Funkübertragung, Funkkopfhörer etc.) frei zur Verfügung steht, kann es bei zeitgleichem Senden eventuell zu einer Störung der Funkstrecke zum Durchlauferhitzer kommen. Hier besteht kein Risiko, das heißt, es kann nicht zu einer ungewollten Veränderung der Solltemperatur kommen, aber in diesem Fall kann ein gesendeter Temperatursollwert vom Empfänger nicht erkannt werden. In solchen Fällen ist eine Wiederholung der Temperatur-Einstellung notwendig.

#### 1.3 Wandhalterung

Die zum Lieferumfang gehörende Wandhalterung kann bei Bedarf vom Benutzer an einem beliebigen Ort zur Aufnahme des Funkbedienteils montiert werden. Dies ist mit dem beiliegendem Klebepad und oder mittels Schrauben möglich.

#### 1.4 Pflege

Zur Pflege der Teile genügt ein feuchtes Tuch. Keine scheuernden oder lösenden Reinigungsmittel verwenden.

#### 1.5 Wichtiger Hinweis

Die CE-Kennzeichnung der Funk-Fernbedienung **FFB..SL** dokumentiert die Übereinstimmung mit den grundlegenden Anforderungen

- gemäß dem Gesetz über Funkanlagen und Telekommunikationsendeinrichtungen (FTEG) und der Richtlinie 1999/5/EG (R&TTE);
- gemäß der Niederspannungsrichtlinie 2006/95/EG;
- gemäß der EMV-Richtlinie 2004/108/EG.

Diese Anleitung sorgfältig aufbewahren, bei Besitzerwechsel dem Nachfolger aushändigen. Bei etwaigen Instandsetzungsarbeiten ist die Anleitung dem Fachhandwerker zur Einsicht zu überlassen.

Einbau des Sende- und Empfangsmoduls und/ oder Erstinbetriebnahme der **FFB 1 SL** müssen von einem Fachhandwerker unter Beachtung dieser Installtionsanleitung durchgeführt werden.

Um eine Verbindung zwischen dem Durchlauferhitzer und dem Funkbedienteil 1 herzustellen, muss zuerst das Sende- und Empfangsmodul 3 der FFB 1 SL installiert werden.

Soll der Durchlauferhitzer über mehrere Funkbedienteile bedient werden, können an das eingebaute Sende- und Empfangsmodul bis zu 5 weitere **FFB 2 SL**-Funkbedienteile angemeldet werden.

## EBEL ELTRO



#### 2. Installation für den Fachhandwerker

FFB 1 SL

#### 2.1 Legende A - E

- 1 Funkbedienteil
- FFB 2 SL 2 Wandhalterung
- 3 Sende- und Empfangsmodul
- Gehäuseoberteil
- Gehäuseunterteil
- 6 Display
- 7 Tasten
- 8 Batterien
- Dichtung
- 10 Stecker Sende- und Empfangsmodul
- 11 Taster Sende- und Empfangsmodul
- 12 LED Sende- und Empfangsmodul

#### 2.2 Technische Daten

Funk-Fernbedienung	FFB 1 SL FFB 2 SL
Abmessung (H / B / T)	152 / 85 / 22 mm
Gewicht ohne Wand-	190 g
halter	
Funkstrecke	bidirektional
Funkfrequenz	868,3 MHz
Reichweite im Gebäude	ca. 25 m
Temperatur-Einstellbe-	20 - 60 °C
reich	
Batterie	CR123A (2x)
Schutzart	IPX5 / IPX7

Tabelle 1

#### 2.3 Vorschriften und Bestimmungen

- Die Gebrauchs- und Montageanleitung des Durchlauferhitzers ist bei der Installation und Bedienung zu beachten.
- Alle elektrischen Anschluss- und Installationsarbeiten sind nach den VDE-Bestimmungen (0100), den Vorschriften des zuständigen EVU's sowie den entsprechenden nationalen und regionalen Vorschriften auszuführen.

#### 2.4 Montage der FFB..SL

Zur Montage der Funkfernbedienung zusätzlich die Gebrauchs- und Montageanleitung des DHE..SL (i) beachten!

#### 2.4.1 FFB 1 SL

Zur Inbetriebnahme des FFB 1 SL das Sendeund Empfangsmodul in den Durchlauferhitzer einbauen:

- ⇒ Durchlauferhitzer spannungsfrei schalten;
- ⇒ Gerätekappe des Durchlauferhitzers wie in der Geräte-Montageanleitung beschrieben abnehmen:
- ⇒ Stecker **E** (10) des Moduls auf Steckplatz "Adapter" im Gerät (DHE..SL (i)) stecken. Modul rechts oben in die Geräterückwand einsetzen
- ⇒ Gerätekappe des Durchlauferhitzers montieren und Durchlauferhitzer an Spannung legen (Montageanleitung Durchlauferhitzer beachten!).

Für FFB 1 SL sind keine Maßnahmen zur Erstinbetriebnahme nötig, diese Funkfernbedienung funktioniert sofort nach Einbau des Sende- und Empfangsmoduls.

#### 2.4.2 FFB 2 SL

Zur Aktivierung eines FFB 2 SL-Funkbedienteiles muss dessen Senderkennung zur Erstinbetriebnahme einmal zum Sende- und Empfangsmodul übertragen werden.

Bei der Erstinbetriebnahme von FFB 2 SL-Bedienteilen muss der Durchlauferhitzer betriebsbereit sein. Die folgenden Arbeiten müssen unter Spannung erfolgen. Nach Öffnen der Gerätekappe auf spannungsführende Teile achten.

#### Erstinbetriebnahme

- ⇒ Gerätekappe des Durchlauferhitzers (siehe Montageanleitung DHE..SL (i)) abnehmen
- ⇒ Funkfernbedienung durch Drücken einer beliebigen Taste aktivieren. Im Display erscheint "CON"
- ⇒ Lernmodus durch Drücken der Taste (11) am Sende- und Empfangsmodul (3) aktivieren (aktivierter Lernmodus wird durch die leuchtende LED (12) am Sende- und Empfangsmodul angezeigt). Nach 30 Sekunden ohne Empfang verlässt
  - das Sende- und Empfangsmodul den Lernmodus automatisch (die LED erlischt)

- ⇒ Die verbleibende Zeit für den Lernmodus wird durch den rückwärts laufenden Balken im Display des Funkbedienteils angezeigt. Während des Lernmodus nochmals eine beliebige Taste am neuen Funkbedienteil drücken.
- ⇒ Die Einstellwerte des Durchlauferhitzers werden auf dem Display des Funkbedienteils angezeigt. Als Bestätigung des Lernvorganges blinkt kurz die LED.
- Gerätekappe des Durchlauferhitzers wieder montieren (Montageanleitung des Durchlauferhitzer beachten!).

Weitere Funkbedienteile werden in gleicher Weise in Betrieb genommen.

Werden mehrere Funkbedienteile nacheinander angemeldet, ist die Taste (11) zur Aktivierung des Lernmodus in dem Sende- und Empfangsmodul für jedes Funkbedienteil neu zu drücken

#### 2.5 Abmelden von **Funkbedienteilen**

Wird aus einer bestehenden Anlage (ein Durchlauferhitzer mit mehreren Funkbedienteilen) ein Funkbedienteil entfernt. ist folgende Vorgehensweise aus Sicherheitsgründen

erforderlich:


- ⇒ Die Taste (11) am Sende- und Empfangsmodul 5 Sekunden gedrückt halten, bis die rote LED blinkt. Damit wird der Speicher für alle Senderkennungen gelöscht;
- > verbleibende Funkbedienteile neu anmelden (siehe 2.4.2).

#### 2.6 Übergabe

Erklären Sie dem Benutzer die Funktionen des Gerätes. Machen Sie ihn besonders auf die Sicherheitshinweise aufmerksam. Überreichen Sie dem Benutzer die Bedienungsund Installtionsanleitung.


Aussagen zu:

"Umwelt, Recycling, Kundendienst und Garantie" siehe Gebrauchs- und Montageanleitung Durchlauferhitzer.

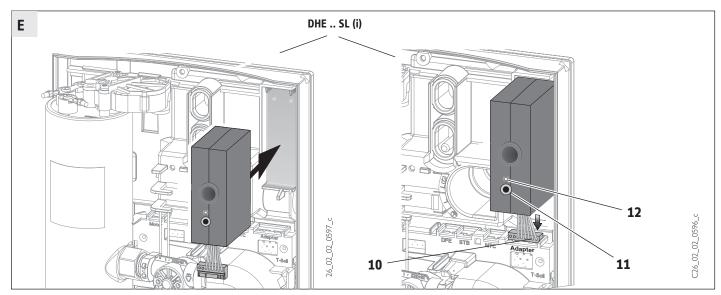

#### 3. Menüführung für den Benutzer und den Fachhandwerker

#### 3.1 Auf einen Blick

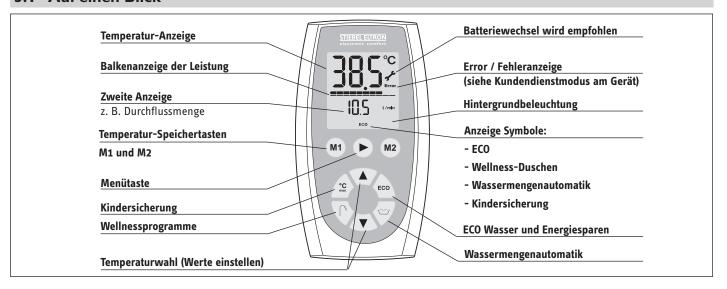

#### 3.2 Temperatur einstellen



#### stufenlose Temperaturwahlmöglichkeit

- 20 bis 60 °C
- **OFF** ⇒ Heizung ist ausgeschaltet.

Temperatur-Speichertasten

für schnellen Wechsel zwischen zwei vorgewählten Temperaturen

(M1) (M2)


• 2 Sekunden drücken zum Speichern der Wunschtemperatur:

Temperatur-Anzeige blinkt 1 x auf und wird gespeichert.

M1 M2

• gespeicherte Temperatur wählen

#### 3.3 Warnanzeigen

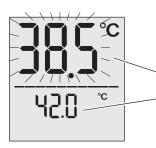


#### Warnblinker bei Übertemperatur

Wenn die Einlauftemperatur größer als die Wunschtemperatur ist, z. B. in Verbindung mit vorgewärmtem Solarwasser, blinkt die Temperatur-Anzeige und die zweite Anzeige zeigt die Einlauftemperatur an.

Temperatur-Anzeige blinkt

Zweite Anzeige Einlauftemperatur

#### 3.4 ECO - Funktion Ein/Aus

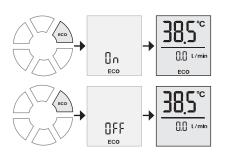

#### ECO Funktion zum Wasser und Energiesparen

Die durchfließende Wassermenge wird auf einen Maximalwert begrenzt (Werkeinstellung 8 I/min, ein anderer Wert kann im Menü eingestellt werden). Veränderung des Maximalwertes siehe Punkt "4. Komfortfunktionen-Einstellungen".

**ECO ein** ⇒ Symbol in der Anzeige

**ECO aus** ⇒ Symbol in der Anzeige erlischt

#### 3.5 Wassermengenautomatik Ein/Aus

#### Einstellen der Wassermengenautomatik

Wird die vorgewählte Füllmenge erreicht, reduziert die Automatik die Durchflussmenge auf ca. 4 l/min.

Beispiel: Wannenfüllung 80 l.

Sind 80 I erreicht, wird auf ca. 4 I/min reduziert, es läuft nur noch wenig Wasser zu. Die Wunschtemperatur bleibt konstant. Veränderung der Max. Wassermenge siehe Punkt "4. Komfortfunktionen-Einstellung".


Wassermengenautomatik ein 

⇒ Symbol in der Anzeige

Wassermengenautomatik aus ⇒ Symbol in der Anzeige erlischt

## 0n + 38.5° 00 1/min 0FF + 38.5° 00 1/min

#### 3.6 Wellness-Duschen Ein/Aus

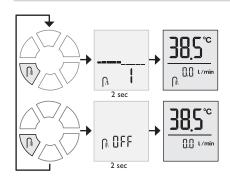

Wellness-Dusch-Programme wählen.


Wellness-Duschen ein ⇒ Symbol in der Anzeige

dabei Anzeige des Duschprogrammes für 2 sec.

Wellness-Duschen aus 

⇒ Symbol in der Anzeige erlischt

#### 4 verschiedene Wellness-Dusch-Programme für Wechselduschen können gewählt werden.

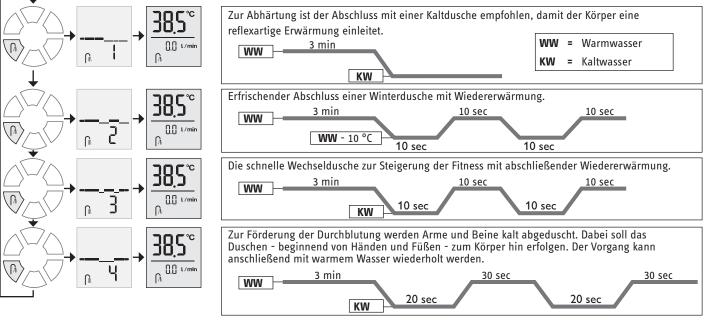

Hinweis: Das zuletzt gewählte Duschprogramm wird bei erneuter Betätigung der Taste automatisch gewählt.

#### 3.7 Kindersicherung Ein/Aus


# 

#### Einstellen der Kindersicherung

Die einstellbare Temperatur wird auf einen Maximalwert begrenzt. Veränderung des Maximalwertes siehe Punkt "4. Komfortfunktionen-Einstellung".

Kindersicherung aus 

→ Symbol in der Anzeige erlischt

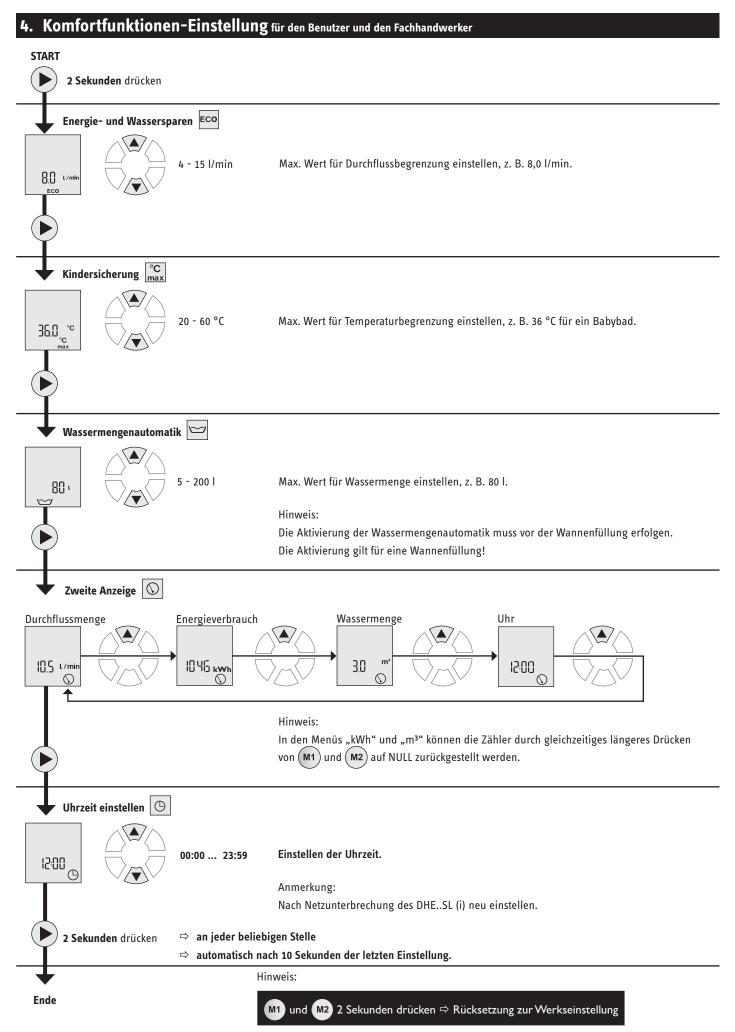



## 5. Störungsbeseitigung Funkfernbedienung für den Benutzer und den Fachhandwerker

Störung	Ursache	Behebung	
Temperaturen > 43 °C nicht ein- stellbar	Dynamischer Verbrühschutz aktiv	Dynamischer Verbrühschutz wird automatisch 2 Minuten nach Zapfende aufgehoben	
Durchlauferhitzer reagiert nicht, schwache Displayanzeige am Funkbedienteil	Niedrige Batteriespannung	Batterien am Funkbedienteil wechseln	
Permanente "CON"-Anzeige am Funkbedienteil	Funkbedienteil nicht am Gerät angemeldet	Fachhandwerker: Funkbedienteil anmelden	
	Bedienteil außerhalb der Reichweite der Sende- und Empfangsbaugruppe	Abstand des Funkbedienteils zum Gerät verringern	
	Sende- und Empfangsbaugruppe nicht korrekt am Gerät angeschlossen	Fachhandwerker: Steckverbindung der Sende- und Empfangsbaugruppe zum Gerät überprüfen	


Tabelle 2

#### **English** page 11-17 **Table of contents** 1. Operation 1.1 Description 11 1.2 Operation 11 1.3 Wall mount\_ 1.4 Care\_\_\_\_ 12 12 1.5 Important note 12 2. Installation\_ 13 2.1 Legend 13 2.2 Technical Data 2.3 Requirements and conditions 13 13 2.4 Installation 13 2.5 Logging out 13 2.6 Hand-over\_ 13 3. Menu guide 14 14 14 3.3 Warning displays 3.4 ECO function 3.5 Water quantity automatic control 3.6 Healthy showering 3.7 Child safety control 4. Setting the comfort functions 14 14 15

5. Troubleshooting\_

15 15 16

17

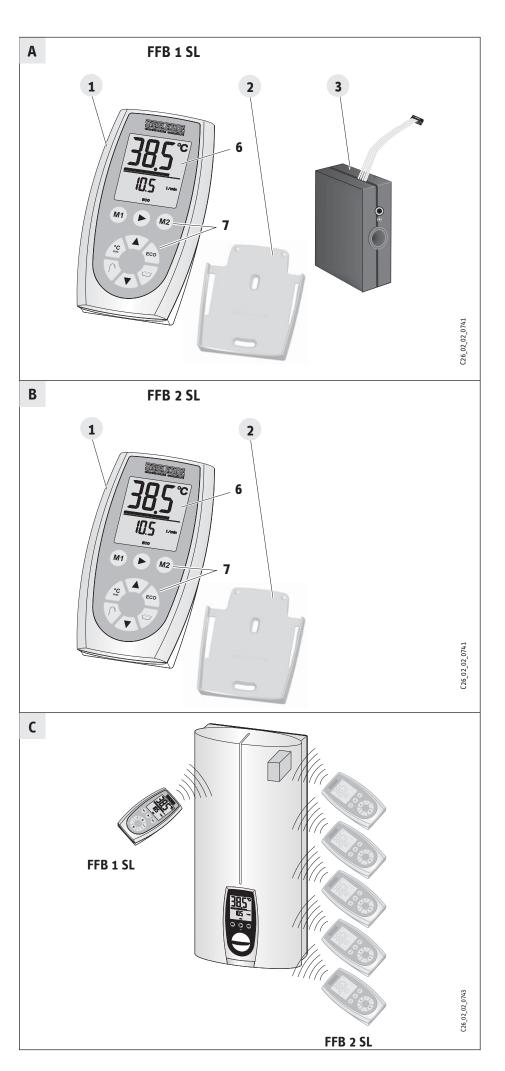

English

### **EBEL ELTRC**



#### 1. Operation for the user and qualified installer

#### 1.1 Description

FFB 1 SL and FFB 2 SL allow remote control of the DHE .. SL (i) electronic comfort instantaneous water heater via a line-of-sight radio link. The instantaneous water heater can be operated both from the remote control and from the control unit on the heater and data can be transmitted in both directions (see also 1.2 Operation).

#### Included in FFB 1 SL A

- Radio remote control unit 1
- Wall mount with adhesive pad 2
- Transceiver module 3

#### Included in FFB 2 SL B

- Radio remote control 1
- Wall mount with adhesive pad 2

#### The FFB 2 SL only works in conjunction with the transceiver module belonging to the FFB 1 SL

The remote control unit is watertight (IPX7) and can therefore even be used while taking a shower or bath. It has a range of approximately 25 m within the building.

In addition to the remote control unit belonging to the FFB 1 SL, another 5 FFB 2 SL radio remote control units can communicate with the transceiver module in the instantaneous water heater.

#### The main information in brief



Temperature selection - between 20 °C and 60 °C in increments of 0.5 °C



Memory push-buttons - 2 reference temperatures can be stored and called up by the user



Battery change recommended

#### 1.2 Operation

The radio remote control unit is normally in power save mode (display switched off). Briefly pressing any button (7) activates the control unit; the backlighting comes on immediately and the display appears after approx. 3 seconds. Whenever a button is pressed the lighting comes on for 8 seconds. If no other button is pressed within 30 seconds the unit automatically switches back to power save mode

#### 1.2.1 Dynamic anti-scald protection

To reduce the risk of scalding, the radio remote control is fitted with dynamic anti-scald protection.

#### **Function**

The first control unit that is activated (the radio remote control unit or the control unit on the heater) is given priority for the next tap procedure, i.e. the selected temperature can be lowered or increased to a maximum of 43 °C from other control units.

#### Activation

To activate the dynamic anti-scald protection, either a temperature must be selected by activating a control on the DHE...SL (i) for the particular water tap, or a temperature must be selected on a radio remote control unit by pressing any button to "wake up" the unit. The remote control unit display then shows the set temperature selected, which can still be adjusted if required.

If a tap procedure is started within the next 2 minutes, the dynamic anti-scald protection is retained while the tap is running and for up to 2 minutes after it has stopped.

#### 1.2.2 Important information




• There is a risk of scalding at outlet temperatures in excess of 43 °C!

· If children or people with restricted physical, sensory or mental capacities use the heater, make sure that they only do so under supervision or after appropriate instruction by a person who is responsible for their safetv.

Children should be supervised to ensure that they do not play with the heater. Risk of scalding!

If it cannot be avoided, we recommend permanently limiting the temperature with the "Child safety control" (see comfort functions setting). Further "anti-scald protection" can be activated by the qualified installer (in service mode on the DHE...SL (i) control unit).

All information in these operating and installation instructions must be followed carefully. They contain important information regarding the safety and operation of the radio remote control system.

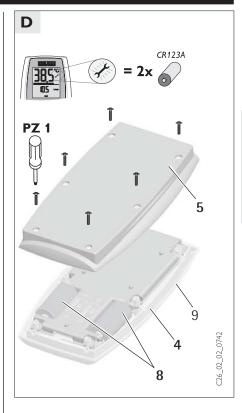

#### 1.2.3 Battery change 🎤 D

The radio remote control unit is powered by 2 lithium cells (type CR123A). When the symbol appears on the display a battery change is recommended. Otherwise change the batteries when the display becomes weaker or is no longer visible.

Always take out used batteries. No liability can be accepted for damage caused by dead batteries!

To change the batteries, unscrew the back of the casing (5) and replace both batteries (8). Note the correct position of the battery poles. Always use the same type of battery and replace them in pairs.

Batteries must not be disposed of with domestic rubbish. Used batteries must be taken back to the shop or a collection point for special substances!

When replacing the back of the casing, make sure that the seal (9) is placed correctly in the front of the casing (4) so that the control unit remains sealed.

#### 1.2.4 Information on the line-ofsight radio link

Special conditions in buildings may weaken the propagation of the radio waves. In these cases the range of the remote control may be reduced. If the FFB..SL cannot establish a connection with the heater, "CON" will appear on the display.

Because the 868 MHz frequency range used is also freely available for other applications (radio controlled thermostats, weather stations with radio transmission, radio head-sets, etc.), simultaneous transmission may cause a fault in the line-of-sight radio link to the instantaneous water heater. No risk is involved, i.e. the set temperature cannot be changed unintentionally, but the set temperature transmitted will not be recognized by the receiver. In these cases the temperature setting will have to be repeated.

#### 1.3 Wall mount

If required by the user, the wall mount supplied can be fitted in any location to hold the radio remote control unit. It can be fitted with the adhesive pad supplied or with screws.

#### **1.4** Care

A damp cloth is all that is needed to care for the parts. Do not use any abrasive or solventtype cleaning agents.

#### 1.5 Important note

The CE marking on the **FFB..SL** radio remote control registers compliance with the basic requirements

- according to the law on radio systems and telecommunication equipment (FTEG) and Directive 1999/5/EG (R&TTE);
- according to the Low Voltage Directive 2006/95/EG;
- according to the EMC Directive 2004/108/EG.

Keep these instructions safe and if the water heater changes hands give to the new owner. If any servicing work is performed, the instructions should be given to the qualified installer to read.

Installation of the transceiver module and/or first start-up of the **FFB 1 SL** must be performed by a qualified installer in accordance with these installation instructions.

To establish a connection between the instantaneous water heater and the radio remote control unit 1, the FFB 1 SL's transceiver module 3 must be installed first.

If the instantaneous water heater is to be operated from several radio remote control units, up to 5 further **FFB 2 SL** radio remote control units can be logged into the transceiver module installed.



#### 2. Installation for the qualified installer

#### 2.1 Legend A - E

- 1 Radio remote control unit FFB 2 SL FFB 1 SL
- 3 Transceiver module
- 4 Housing top
- 5 Housing bottom
- 6 Display
- 7 Buttons
- 8 Batteries
- 9 Seal
- 10 Transceiver module connector
- 11 Transceiver module button
- 12 Transceiver module LED

#### 2.2 Technical data

Radio remote control	FFB 1 SL FFB 2 SL
Dimensions (H / W / D)	152 / 85 / 22 mm
Weight excluding wall	190 g
mount	
Line-of-sight radio link	Two-way
Radio frequency	868.3 MHz
Range inside the building	Approx. 25 m
Temperature setting	20 - 60 °C
range	
Battery	CR123A (2x)
Protection class	IPX5 / IPX7

Table 1

#### 2.3 Requirements and conditions

- The operating and installation instructions for the instantaneous water heater should be followed for installation and operation.
- All electrical connection and installation work should be performed in accordance with VDE specifications (0100), the requirements of the relevant electricity companies and corresponding national and regional requirements.

#### 2.4 Installation of the FFB..SL

To install the radio remote control, also follow the operating and installation instructions for the DHE..SL (i).

#### 2.4.1 FFB 1 SL

To start-up the **FFB 1 SL**, install the transceiver module in the instantaneous water heater:

- Disconnect the water heater from the electricity supply;
- Remove the heater's cover as described in the heater installation instructions;
- ⇒ Insert the module's connector E (10) into the "Adapter" socket on the heater (DHE..SL (i)). Place the module in the top right of the heater's back wall.
- ⇒ Fit the water heater cover and connect the water heater to a voltage supply (Follow the installation instructions for the instantaneous water heater).

No first start-up work is required for **FFB 1 SL** as this radio remote control is operational as soon as the transceiver module has been fitted

#### 2.4.2 FFB 2 SL

To activate an **FFB 2 SL** radio remote control, its transmission ID must be sent once to the transceiver module so that it can be started up for the first time.

When starting-up FFB 2 SL remote control units for the first time the instantaneous water heater must be ready for operation. The following work must be performed while it is connected to the electricity supply. Beware of live parts when opening the heater cover.

#### First start-up

- ⇒ Remove the cover from the instantaneous water heater (see installation instructions for DHE..SL (i))
- Activate radio remote control by pressing any button. "CON" will appear on the display.
- Activate learning mode by pressing the button (11) on the transceiver module (3) (learning mode active is shown by the LED (12) on the transceiver module lighting).
   After 30 seconds without receiving, the transceiver module automatically leaves

- learning mode (LED goes out).
- ⇒ The remaining learning mode time is shown by the bar, running backwards, on the remote control unit's display. While in learning mode, again press any key on the new radio remote control unit.
- ⇒ The values set for the instantaneous water heater are shown on the radio remote control unit's display. The LED flashes briefly to confirm the learning process.
- Put the cover back on the instantaneous water heater (follow the installation instructions for the heater).

Other radio remote control units are commissioned in the same way.

If several radio remote control units are logged in one after the other, the button (11) should be pressed again for each radio remote control unit to activate learning mode in the transcei-

## 2.5 Logging out radio remote control units

If a radio remote control unit is removed from an existing system (one instantaneous water heater with several radio remote control units), the following procedure is required for safety reasons:


- ⇒ Keep the button (11) on the transceiver module pressed down for 5 seconds until the red LED flashes. This deletes all transmitter IDs from the memory;
- ⇒ Log the remaining radio remote control units back in (see 2.4.2).

#### 2.6 Hand-over

Explain the device's functions to the user. In particular draw his attention to the safety instructions. Give the user the operating and installation instructions.


#### Information on:

"Environment, recycling, service and warranty" see the operating and installation instructions for the instantaneous water heater.

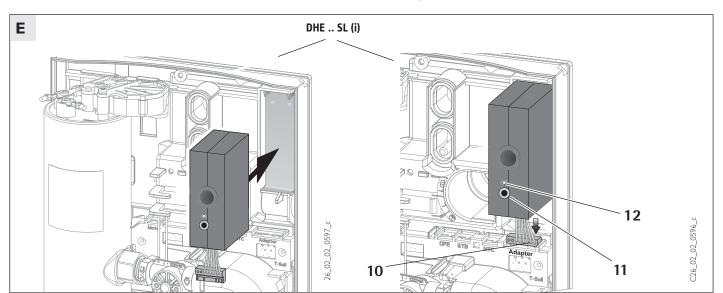

#### 3. Menu guide for the user and qualified installer

#### 3.1 At a glance

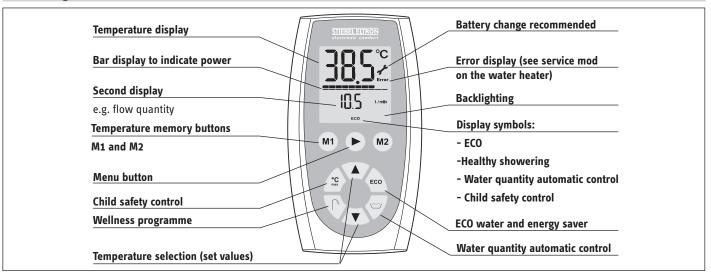

#### 3.2 Setting the temperature



#### Stepless adjustable temperature selection

- 20 to 60 °C
- **OFF** ⇒ Heating is switched of

Temperature memory push-buttons

For rapid switching between two pre-selected temperatures

M1 M2


• Press for 2 seconds to save the required temperature:

Temperature display flashes once and is saved.

M1 M2

Select stored temperature

#### 3.3 Warning displays

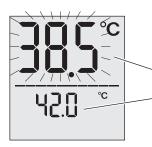

#### Flashing warning light for excess temperature

When the inlet temperature is higher than the desired temperature, e.g. as a result of solar-heated water, the temperature display flashes and the second display shows the inlet temperature.


Temperature display flashes

Second display - inlet temperature

#### 3.4 ECO function On/Off

#### ECO function for water and energy saving

The quantity of water flowing through is limited to a maximum value (factory setting 8 l/min, a different value can be set in the menu).

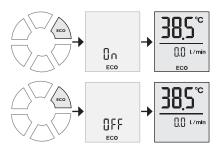

**ECO on** ⇒ Symbol in the display


**ECO off** ⇒ Symbol disappears

#### 3.5 Water quantity automatic control On/Off

#### Setting water quantity automatic control


When the pre-set quantity is reached the automatic unit reduces the flow quantity to approx. 4 l/min. Example: filling a bath 80 l.

When 80 I is reached the flow is reduced to approx. 4 I/min, only a little water continues to flow. The desired temperature remains constant. For changing the max. water quantity see point "4. Setting the comfort functions".



Water quantity automatic control on ⇒ Symbol in the display

#### 3.6 Healthy showering On/Off

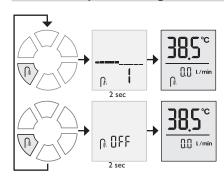


Selecting a wellness programme.

**Healthy showering on** ⇒ Symbol in the display

The shower programme is shown for 2 s.

**Healthy showering off** ⇒ No symbol in the display

#### 4 different wellness shower programmes can be selected for alternate showering

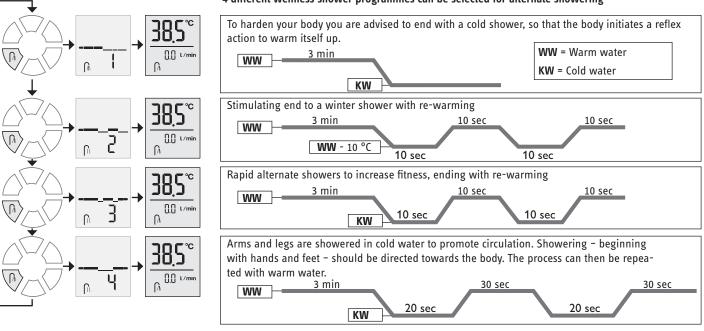

Note: The last shower programme selected is automatically selected again the next time a button is pressed.

#### 3.7 Child safety control On/Off


## $\begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \\ \\ \end{array} \end{array} \end{array} \end{array} \begin{array}{c} \begin{array}{c} \begin{array}{c} \\ \end{array} \end{array} \end{array} \begin{array}{c} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \end{array} \end{array} \begin{array}{c} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c} \\ \end{array} \end{array} \begin{array}{c$

#### Setting the child safety control

The variable temperature is restricted to a maximum value. See point "4. Setting the comfort functions" on changing the maximum value.

Child safety control on 

⇒ Symbol in the display

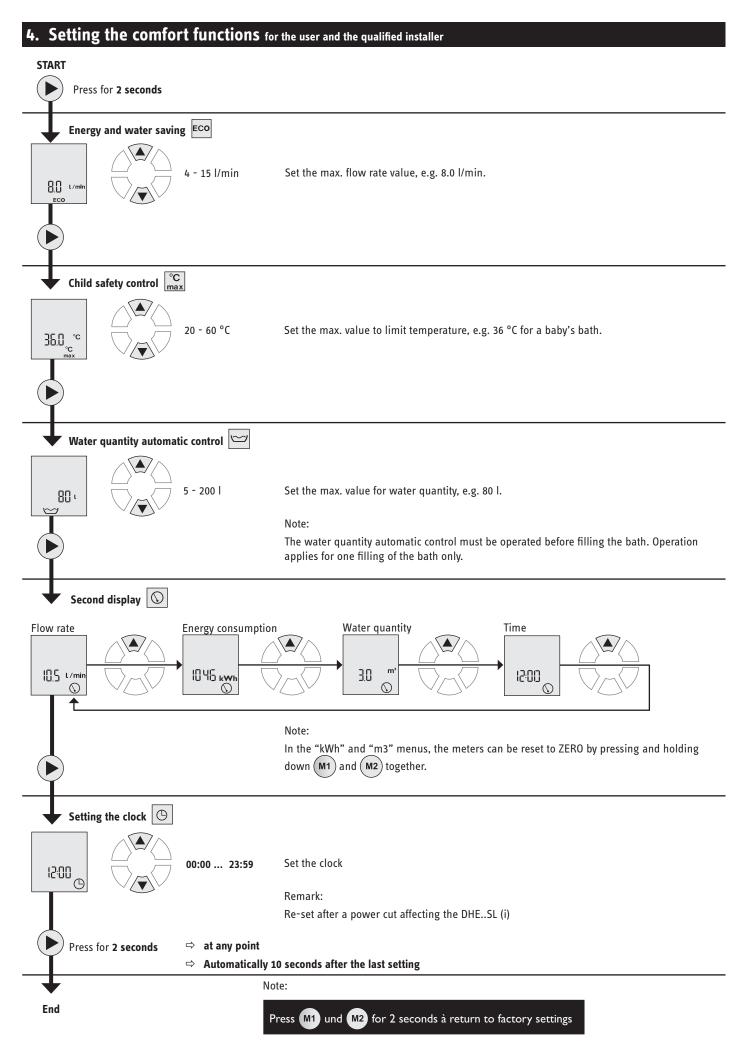



## 5. Troubleshooting on the radio remote control for the user and the qualified installer

Fault	Cause	Remedy
Temperatures cannot be set > 43 °C	Dynamic anti-scald protection is on	Dynamic anti-scald protection goes off automatically 2 minutes after the end of drawing water
The instantaneous water heater is not responding, weak display on the radio remote control unit	Low batteries	Change batteries in the radio remote control unit
"CON" permanently displayed on the radio remote control unit	Radio remote control unit not logged into the heater	Qualified installer: Log in the radio remote control unit
	Remote control unit is out of the transceiver module's range	Reduce the distance between the radio remote control unit and the heater
	Transceiver module not correctly connected to the heater	Qualified installer: check the connection of the transceiver module to the heater

Table 2

17



## Notizen / Notes





Notizen / Notes

English

#### **Deutschland**

STIEBEL ELTRON GmbH & Co. KG Dr.-Stiebel-Straße | 37603 Holzminden Tel. 05531 702-0 | Fax 05531 702-480 info@stiebel-eltron.de www.stiebel-eltron.de 
 Verkauf
 Tel. 05531 702-110 | Fax 05531 702-95108 | info-center@stiebel-eltron.de

 Kundendienst
 Tel. 05531 702-111 | Fax 05531 702-95890 | kundendienst@stiebel-eltron.de

 Ersatzteilverkauf
 Tel. 05531 702-120 | Fax 05531 702-95335 | ersatzteile@stiebel-eltron.de

#### **Australia**

STIEBEL ELTRON Australia Pty. Ltd. 4/8 Rocklea Drive | Port Melbourne VIC 3207 Tel. 03 9645-1833 | Fax 03 9645-4366 info@stiebel.com.au www.stiebel.com.au

#### Austria

STIEBEL ELTRON Ges.m.b.H. Eferdinger Str. 73 | 4600 Wels Tel. 07242 47367-0 | Fax 07242 47367-42 info@stiebel-eltron.at www.stiebel-eltron.at

#### Belgium

STIEBEL ELTRON bvba/sprl
't Hofveld 6 - D1 | 1702 Groot-Bijgaarden
Tel. 02 42322-22 | Fax 02 42322-12
info@stiebel-eltron.be
www.stiebel-eltron.be

#### **Czech Republic**

STIEBEL ELTRON spol. s r.o. K Hájům 946 | 155 00 Praha 5 - Stodůlky Tel. 251116-111 | Fax 235512-122 info@stiebel-eltron.cz www.stiebel-eltron.cz

#### Denmark

Pettinaroli A/S Mandal Allé 21 | 5500 Middelfart Tel. 06341 666-6 | Fax 06341 666-0 info@stiebel-eltron.dk www.stiebel-eltron.dk

#### **Finland**

Insinööritoimisto Olli Andersson Oy Kapinakuja 1 | 04600 Mäntsälä Tel. 020 720-9988 | Fax 020 720-9989 info@stiebel-eltron.fi www.stiebel-eltron.fi

#### France

STIEBEL ELTRON SAS 7-9, rue des Selliers B.P 85107 | 57073 Metz-Cédex 3 Tel. 0387 7438-88 | Fax 0387 7468-26 info@stiebel-eltron.fr www.stiebel-eltron.fr

#### Hungary

STIEBEL ELTRON Kft. Gyár u. 2 | 2040 Budaörs Tel. 01 250-6055 | Fax 01 368-8097 info@stiebel-eltron.hu www.stiebel-eltron.hu

#### Japan

NIHON STIEBEL Co. Ltd.
Kowa Kawasaki Nishiguchi Building 8F
66-2 Horikawa-Cho
Saiwai-Ku | 212-0013 Kawasaki
Tel. 044 540-3200 | Fax 044 540-3210
info@nihonstiebel.co.jp
www.nihonstiebel.co.jp

#### **Netherlands**

STIEBEL ELTRON Nederland B.V. Daviottenweg 36 5222 BH 's-Hertogenbosch Tel. 073 623-0000 | Fax 073 623-1141 stiebel@stiebel-eltron.nl www.stiebel-eltron.nl

#### Poland

STIEBEL ELTRON Polska Sp. z o.o. ul. Działkowa 2 | 02-234 Warszawa Tel. 022 60920-30 | Fax 022 60920-29 stiebel@stiebel-eltron.pl www.stiebel-eltron.pl

#### Russia

STIEBEL ELTRON LLC RUSSIA Urzhumskaya street 4, building 2 | 129343 Moscow Tel. 0495 7753889 | Fax 0495 7753887 info@stiebel-eltron.ru www.stiebel-eltron.ru

#### Slovakia

TATRAMAT - ohrievače vody, s.r.o. Hlavná 1 | 058 01 Poprad Tel. 052 7127-125 | Fax 052 7127-148 info@stiebel-eltron.sk www.stiebel-eltron.sk

#### **Switzerland**

STIEBEL ELTRON AG Netzibodenstr. 23 c | 4133 Pratteln Tel. 061 81693-33 | Fax 061 81693-44 info@stiebel-eltron.ch www.stiebel-eltron.ch

#### **Thailand**

STIEBEL ELTRON Asia Ltd.
469 Moo 2 Tambol Klong-Jik
Amphur Bangpa-In | 13160 Ayutthaya
Tel. 035 220088 | Fax 035 221188
info@stiebeleltronasia.com
www.stiebeleltronasia.com

#### **United Kingdom and Ireland**

STIEBEL ELTRON UK Ltd.
Unit 12 Stadium Court
Stadium Road | CH62 3RP Bromborough
Tel. 0151 346-2300 | Fax 0151 334-2913
info@stiebel-eltron.co.uk
www.stiebel-eltron.co.uk

#### **United States of America**

STIEBEL ELTRON, Inc. 17 West Street | 01088 West Hatfield MA Tel. 0413 247-3380 | Fax 0413 247-3369 info@stiebel-eltron-usa.com www.stiebel-eltron-usa.com





Irrtum und technische Änderungen vorbehalten! | Subject to errors and technical changes! | Sous réserve d'erreurs et de modifications techniques! | Onder voorbehoud van vergissingen en technische wijzigingen! | Salvo error o modificación técnica! | Excepto erro ou alteração técnica | Zastrzežone zmiany techniczne i ewentualne blędy | Omyly a technické změny jsou vyhrazeny! | A muszaki változtatások és tévedések jogát fenntartjuk! | Отсутствие ошибок не гарантируется. Возможны технические изменения. | Сhyby a technické zmeny sú vyhradené!